

# Installation instructions / Monolith 13,8-15,9 kW 1-phase Pro-B2 control unit + S2-30 power booster

Affixing the sensor to the ceiling:  
distance from heater frame 100–300 mm

The temperature sensor should be installed no  
less than 1000 mm from an undirected air vent income,  
or less than 500 mm from a directed air vent.

